





## **TECHNICALL**

- Including microphone
- Including speaker
- Including function "END OF ALARM"
- Plug & Play
- Including cable 0,5m
- Including cable 2m
- Including cable 4m
- Including 3-way splitter
- Including industrial tape
- Enclosure: Plastic ABS
- Size: BxHxD= 77x100x25mm
- Article number set: RK-2006

## **RUKRA ALARM BUTTONS**

The RUKRA alarm pushbuttons have got a speaker and a microphone. The microphone is always active during a call, the speaker is only active while pressing the white button.

The black alarm button must be pressed for 2 seconds to make an emergency alarm call.

**End of alarm:** The black alarm button has besides making an emergency alarm call even the additional function "end of alarm". Keeps the alarm button ± 8 seconds and the "end of alarm" call will be send to the RUKRA Web-based Call Center.

The alarm button set consists two buttons (on and below the elevator cabin) and comes including 3x Plug & Play connection cables, 2x double-sided mounting tape and 1x 3-way splitter.

DURABLE AND MAINTENANCE FREE