7 Segment Controller



DESCRIPTION

A panel with 7- segment display to indicate the status of multiple C4A controllers on a network.

This unit can monitor 10 addresses. Two conditions are communicated;

- a) C4A system going into alarm
- b) C4A system having any fault such as mains fail, short circuit of wiring or weak battery

SPECIFICATION

• Dimensions (mm):


Input voltage:

146(L) x 86(W) x 30(H)


230VAC Nominal

BLOCK DIAGRAM

PANEL FRONT

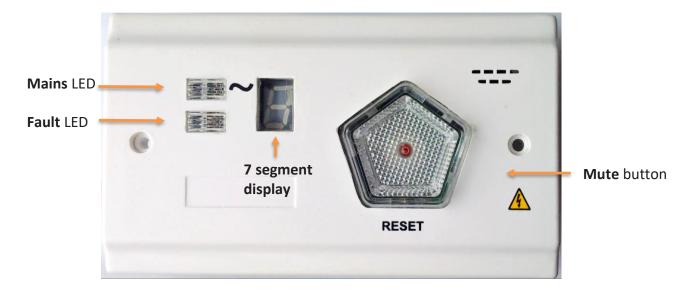



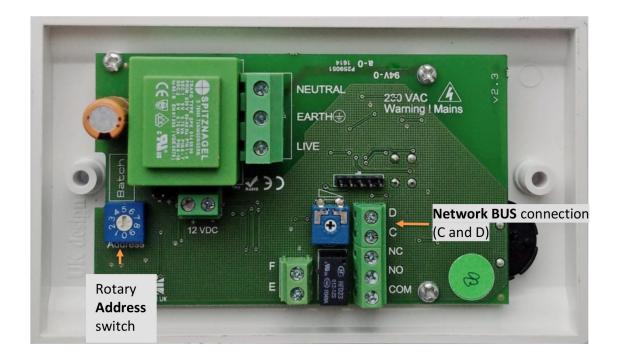

INSTRUCTIONS

STEP 1

Connect the MAINS into the terminal block. Please observe all standard wiring protocols.

STEP 2

Wire the network bus connections into C and D on the PCB.

Please **observe polarity** throughout the network.

STEP 3

Power up the 7 segment monitor first and then all the other systems on the network. This is important to ensure proper functioning of the network.

STEP 4

Set any one of the connected C4A systems into alarm. The corresponding address will be displayed on the panel. Also, the sounder will emit a tone. Try silencing this local alarm, by pressing the reset button. The sounder on the C4A7MON will silence and leave the C4A to continue in its alarm state.

STEP 5

Set another unit into a fault by switching off the power on a system which has battery back-up.

Once any existing alarms have been reset, then 'F' led will flash along with the corresponding address.

All fault indications are superseded by an alarm condition.



