Specifications

| Model | 9СН | 36CH | | |
|-----------------------|---|---|--|--|
| Operating system | LINUX | LINUX | | |
| Compression Standard | H. 265/H. 264 | H.265/H.264 | | |
| IPC Input | 9CH (4K,5MP,4MP,3MP,2MP,960P,720P, etc.) | 36CH (4K,5MP,4MP,3MP,2MP,960P,720P, etc.) | | |
| HD Output | 1CH, HD port; resolu- tion:4K/1080P/720P, etc | 1CH, HD port; resolu- tion:4K/1080P/720P,etc | | |
| VGA Output | 1CH, VGA port; resolu- tion:4K/1080P/720P, etc | 1CH, VGA port; resolu- tion:4K/1080P/720P,etc | | |
| Preview resolution | single channel for the IPC main stream, multi-channel for sub-stream | single channel for the IPC main stream, multi-channel for sub-stream | | |
| Video Frame Rate | PAL: 25 frames / sec; NTSC: 30 frames / sec. | PAL: 25 frames / sec; NTSC: 30 frames / sec. | | |
| Local Playback | 4K@1CH | 4K@4CH | | |
| Backup | USB, network backup | USB, network backup | | |
| Hard disk | Two SATA hard drives (maximum 12TB) | Two SATA hard drives (maximum 12TB) | | |
| Network interface | 1 RJ-45 port(10/100Mbps) | 1 RJ-45 port(10/100/1000Mbps) | | |
| Support mobile | iPhone, iPad, Android | iPhone, iPad, Android | | |
| Browser | IE8.0 and above, Firefox, Google | IE8.0 and abov e, Firef ox, Google | | |
| Support Agreement | ONVF 2.4 | ONVIF 2.4 | | |
| USB Interface | 2-USB2.0 | 2-USB2.0 | | |
| Multi-operation | Support for recording, playback, network, backup, mobile monitoring and interface operation | Support for recording, playback, network, backup, mobile monitoring and interface operation | | |
| Operating Voltage | DC 12V | DC 12V | | |
| Operating Temperature | -10°C — 55°C | -10°C — 55°C | | |
| Humidity | 10%~90% | 10%~90% | | |
| Power Consumption | ≤ 24 W | ≤ 60 W | | |

Item List

| Item | Name | Quantity |
|------|--------------------------|----------|
| 1 | Mouse | 1 |
| 2 | CD | 1 |
| 3 | Power Adapter | 1 |
| 4 | Quick Installation Guide | 1 |
| 5 | Network Video Recorder | 1 |

Franchiser:

Network Video Recorder



Quick Installation Guide

 
Thank you for using our product, please read this manual carefully before use.

Please refer to the complete User manual for more information from the CD.

■ 1. Product Appearance Introduction

Note: The appearance of products, including buttons, interfaces and layout, are for reference only, and the actual delivered goods shall prevail.

Front Panel



| Name | Function | Name | Function |
|----------------|--|------|------------------------------------|
| Numerical keys | Single Channel switch | [4] | 4 Channel switch |
| OK/MENU | Enter the main menu | 9 | 9 Channel switch |
| USB/MOUSE | USB storage devices and the mouse | 16 | 16 Channel switch |
| ALARM | Of ten bright when alarming | REC | Video always bright |
| LINK | Steady or flashing light when the network connection works | HDD | Steady light when the HDD works |
| POWER | Power indicator | | |

Rear Panel





| Interface Name | Interface Function | |
|----------------|--------------------|--|
| 1 | Ethernet | |
| 2 | VGA output | |
| 3 | HD output | |
| 4 | USB 3.0 | |
| 5 | Power input | |
| 6 | The power switch | |

2. Hard Disk Installation

Take the following model as an example

- ① Loosen the screws on the base plate.
- e plate. ② Align the screw holes on the hard disk with screw holes on the base plate.





- ③ Turn the device and use screws to tighten the hard disk to the bottom.
- ④ Plug in the hard drive cable and power cable.





3.Local System Login

After the normal startup, click the right mouse button and there will be a login dialogue. Then enters the user name and password in the input box. In the factory default state, the user is <u>admin</u>, and the password is <u>12345</u>. Admin is the default high-privileged user.



■ 4.Web Login

If the plug-ins cannot be loaded, you need to set E as follows:

Tools —>Internet Options—>Custom Level—>ActiveX controls and
plug-ins, to enable all, and click OK.

Enter the IP address of the recorder in the browser address bar, and connect. After a successful connection, it will pop up an input box as shown below.

Enter the user name and password The factory default administrator user name is <u>admin</u>, password is <u>12345</u>.



■ 5. Connection with the IPC

Note: Make sure the NVR and IPC are in the same LAN, but different IP address.



